

MAX DRIVE 160™ for SONY PS3®

User Information

Introduction

Congratulations on your purchase of Datel's *MAX DRIVE 160™* for SONY PS3®.

MAX DRIVE 160™ connects to your PS3® and provides a massive 160GB of external storage capacity, perfect for storing files downloaded from the PLAYSTATION® STORE like demos and movie trailers.

You can also connect *MAX DRIVE 160™* to your PC to load it with movies, music, images and more for playback on your PS3®. The ultra-fast USB 2.0 technology will ensure that even the largest of files transfer in minutes.

Using *MAX DRIVE 160™*

MAX DRIVE 160 is completely Plug-and-Play. Both your PS3® and PC will recognise the drive without the need to install drivers or software*.

*USB Mass Storage Device compatible operating system required.

On your PC

A couple of seconds after connecting the drive it will be assigned a new drive letter. Drag and drop files onto this drive just as you would any other drive.

When adding media content to your MAX DRIVE 160 for playback on your PS3, be sure to use these special folder names so that the content is accessible from the browser on your console:

“PICTURE”	“VIDEO”	“MUSIC”
For storing all photo/image files.	For storing all movie/video files.	For storing all music/audio files.
JPEG, TIFF, PNG, GIF, BMP	MPEG-4 Simple Profile (AAC), H.264/MPEG-4 AVC, MPEG-1, MPEG-2 PS, MPEG-2 TS, AVI - Motion JPEG.	MP3, MP4, ATRAC3plus™, ATRAC3™, WAV, WMA

Files must be placed straight into the above folders (i.e. not sub folders of these folders) in order to be readily accessible through the PS3® browser.

If the video or audio file you would like to play is not compatible with the PS3® system (see file-format list above) you should be able to convert it using Datel's *MAX Media Manager for PS3®*, sold separately.

On your PS3®

As soon as you connect the hard drive to your console you will be able to access content stored on it. In order to playback media content like movies, photos and music files need be stored in the specially named folders described above.

Using the PS3®'s browser menu, scroll across to the 'Photo', 'Music', and 'Video' folders where you will now see 'USB DEVICE' listed as a sub-menu.

You can also use the browser to transfer files between the PS3®'s internal hard drive (if you have one) and the *MAX DRIVE 160™*, allowing you to transfer files you have previously downloaded to your PC or to share with others.

For full details on browsing, playing, moving and copying files on internal or external hard drives, consult your PS3® owners manual.

Precautions

MAX DRIVE 160™ is manufactured using on the highest quality components and has been designed to provide you with years of trouble-free operation. It is, however, a mechanical device with moving parts and as such care should be taken not to expose the drive to shock, or extremes of temperature or humidity.

Never turn the drive off whilst the disk is being accessed as damage to data or the drive itself could be caused.

Customer Services

DATEL CUSTOMER SERVICES EUROPE:

Customers Services,
Datel Ltd,
Stafford Road,
Stone,
STAFFS
ST15 0DG
UNITED KINGDOM

Email: support@datel.co.uk
Web: www.codejunkies.com

DATEL CUSTOMER SERVICES USA:

ATTN: Customer Services,
Datel Design & Development Inc,
33 North Garden Avenue,
Suite 900, Clearwater, FL 33755

Email: support@dateldesign.com

Customer service knowledgebase: www.datelcustomerservice.com
Main website: www.codejunkies.com

© 2007 Datel Design & Development Ltd. *MAX DRIVE 160* is a trademark of Datel Design and Development Ltd.

MAX DRIVE 160™ is a 100% unofficial product and is NOT sponsored, endorsed or approved by SONY, nor any games developer or publisher.

PLAYSTATION and PS3 are registered trademarks of SONY in the United States and/or other countries.