


PLAY & CHARGE KIT & NiMH BATTERY

For XBOX 360™

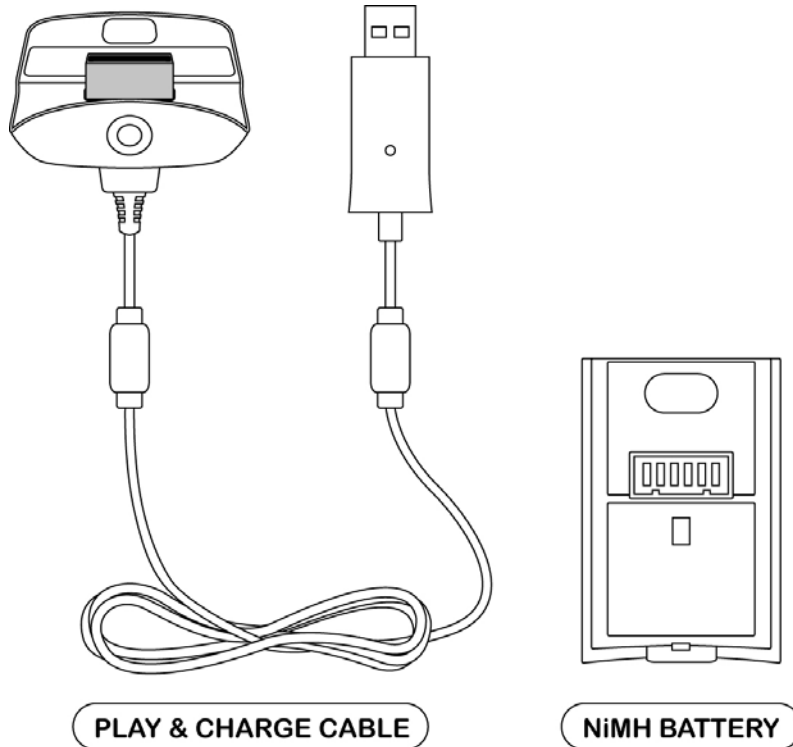

Introduction

Congratulations on your purchase of Datel's Play & Charge Kit & NiMH Battery.

You can now recharge your Xbox 360™ wireless controller while you play, and kiss disposable batteries goodbye! Complete with a charging cable and rechargeable NiMH Battery, the Xbox 360™ Play & Charge Kit is all you need to juice up your wireless controller – even in the midst of battle.



Rechargeable Battery Safety

Improper use of rechargeable batteries such as the NiMH battery included in this pack may result in fluid leakage, overheating or in some cases, explosion. Any fluid that leaks from your battery may be toxic. It can cause burns to skin and eyes, and is harmful if swallowed. To reduce these risks:

- Charge only using the Play & Charge charger included in this kit.
- Keep this battery away from children.
- Do not open, heat or damage this battery, or dispose of it in a fire.
- If the battery leaks, remove it from your controller, taking care not to come into direct contact with the leaked fluid. If the fluid gets on your skin, wash immediately with water. Before installing a replacement battery, clean any fluid from the battery compartment with a damp paper towel.
- Always recycle or dispose of batteries in accordance with local disposal regulations (if any).

- Do not allow metal objects to touch the battery terminals, as they can become hot and cause burns.
- If you need to clean the battery, use only a dry cloth. Water or chemicals may damage the contacts.

Using your Play & Charge Kit & NiMH Battery

Charge your NiMH Battery included in this kit the first time you use it, and whenever it becomes discharged.

To charge the NiMH Battery using the Play & Charge cable:

1. Remove the battery cover from your wireless controller.
2. Install the NiMH Battery pack into the battery compartment of your controller and push it in until it closes.
3. Connect the Play & Charge cable to the connector on the front of your controller.

IMPORTANT

Do not connect the Play & Charge cable to the connector on your controller without the NiMH Battery installed. Doing so can damage your controller.

4. Connect the USB end of the Play & Charge cable to a controller port on your console.
5. Turn on your console.
6. A light glows red on the Play & Charge connector (at the controller end) to indicate the NiMH Battery is charging.
7. When the light changes to green, the battery is fully charged and the controller can be used wirelessly.

Play while you charge

Of course, the magic of Play & Charge is you're free to use your controller while it's charging! When charging is complete, disconnect the Charge & Play cable to enjoy wireless gaming once more.

Information

- Fully charging the NiMH Battery using the Play & Charge cable takes up to six hours.
- The NiMH Battery loses its charge if it is left for a long time. If this happens, simply charge it up again in the usual way.
- If the NiMH Battery becomes very low on power, it can take 20 minutes of charging before it can power a controller.
- When new, or after a long period in storage, it can take up to five full charge cycles before the NiMH Battery reaches full performance.
- The battery has a limited life. After many charge cycles, you may notice the play time of the battery declines. The battery needs to be replaced when play time becomes too short, or when it will not accept a charge.

Troubleshooting

Battery Charges Slowly

Charge time is increased by:

- Using your controller while it's charging.
- Playing games that use vibration feedback.

Charge Light Doesn't Come On

Check that:

- The battery pack is firmly connected to the controller.
- The Play & Charge cable's USB end is properly inserted into your Xbox 360.



Damaged Batteries

If your battery has been immersed in liquid, exposed to intense shock or extreme temperatures, it may be damaged beyond use. Damaged batteries may not charge correctly and could harm your controller. Dispose of damaged batteries in accordance with local laws.

Technical Support

Before contacting Datel's customer service department, please ensure you have read through and understood the information in this manual.

Please ensure you have information on when and where you purchased this product to hand.

DATEL CUSTOMER SERVICES EUROPE:

Customers Services,
Datel Ltd,
Stafford Road,
Stone,
STAFFS
ST15 0DG
UNITED KINGDOM

Email: support@datel.co.uk
Web: www.codejunkies.com

DATEL CUSTOMER SERVICES USA:

ATTN: Customer Services,
Datel Design & Development Inc,
33 North Garden Avenue,
Suite 900, Clearwater, FL 33755

Email: support@datel.design.com

Customer service knowledgebase: www.datelcustomerservice.com
Main website: www.codejunkies.com

© 2006 Datel Design & Development Ltd.

Play & Charge Kit & NiMH Battery for Xbox 360 is a 100% unofficial product and is NOT sponsored, endorsed or approved by Microsoft Corporation, nor any games developer or publisher.

Microsoft, Xbox, Xbox 360 and Xbox Live are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.